Connector to Harness Index

Right-side Engine Compartment Wire Harness (L4)

Ref	Connector or Terminal	Cavities/ Color	Location	Connects to	Notes
1	DRL diode	2-—	Behind right kick panel		Canada
2	Primary H02S relay	5-BLK	Behind right kick panel		
2	High beam cut relay	5-BLK	Behind right kick panel		Canada
2	A/F sensor heated control relay	5-BLK	Behind right kick panel		
3	Taillight relay	5-BLK	Behind right kick panel		
4	Passenger's under-dash fuse/relay box connector C (see page 6-4)	18-LT GRN	Behind right fuse box cover		
5	Passenger's under-dash fuse/relay box connector D (see page 6-4)	3-LT GRN	Behind right fuse box cover		
6	ABS pump motor relay	5-BLK	Right rear of engine compartment		
7	ABS fail-safe relay	5-BLK	Right rear of engine compartment		
8	Seat heater relay	5-BLK	Right rear of engine compartment		Canada
9	Under-hood fuse/relay box connector D (see page 6-7)	16-GRN or BLU	Right rear of engine compartment		
10	Under-hood fuse/relay box connector C (see page 6-7)	3-BRN	Right rear of engine compartment		
11	Under-hood fuse/relay box connector B (see page 6-7)	7-BRN	Right rear of engine compartment		
12	Under-hood fuse/relay box connector A (see page 6-7)	18-GRN or BLU	Right rear of engine compartment		
13	ELD unit	3-GRY	Inside under-hood fuse/relay box		
14	C201	16-BLU	Behind glove box	Dashboard wire harness B (right branch) (see page 203-17)	
15	C202	7-BRN	Behind glove box	Dashboard wire harness B (right branch) (see page 203-17)	
16	C204	22-GRN	Behind right fuse box cover	Dashboard wire harness A (see page 203-18)	
17	C203	5-GRY	Behind glove box	Dashboard wire harness B (right branch) (see page 203-17)	
18	C101	10-GRY	Right rear of engine compartment	Engine wire harness (see page 203-2)	
19	C102	14-GRY	Right rear of engine compartment	Engine wire harness (see page 203-2)	A/T
19	C102	8-GRY	Right rear of engine compartment	Engine wire harness (see page 203-2)	*1 (M/T)
19	C102	10-GRY	Right rear of engine compartment	Engine wire harness (see page 203-2)	*2 (M/T)
20	Engine mount control solenoid valve	2-GRY	Center rear of engine compartment		A/T
21	Secondary HO2S	4-GRY	Underside of vehicle, near catalytic converter		
22	Condenser fan motor	2-GRY	Front of engine compartment		
23	A/C compressor	1-GRY	Right front of engine compartment		
24	High horn	1-BLK	Behind center of front bumper		
25	Hood switch	2-GRY	Front of vehicle, at hood latch		
26	Low horn	1-BLK	Behind center of front bumper		
27	Radiator fan motor	2-GRY	Front of engine compartment		
28	A/C pressure switch	2-GRY	Behind right side of front bumper		
29	Right headlight connector B	2-BLU	Behind right headlight assembly		
30	Right front parking light	2-BRN/NAT	Behind right headlight assembly		
31	Right headlight connector A	2-WHT	Behind right headlight assembly		
32	G201		Right side of engine compartment	Body ground via right engine compartment wire harness	
33	Right front turn signal/side marker light	3-WHT	Behind right front of bumper		
34	Test tachometer connector	2-NAT	Right side of engine compartment		
35	Right front wheel speed sensor	2-ORN	Right side of engine compartment		
36	G202		Right side of engine compartment	Body ground via right engine compartment wire harness	

*1: '98-99 models, '00-'02 models (except California)
*2: '00-'02 models (California)

©2002 American Honda Motor Co., Inc.

Connector to Harness Index

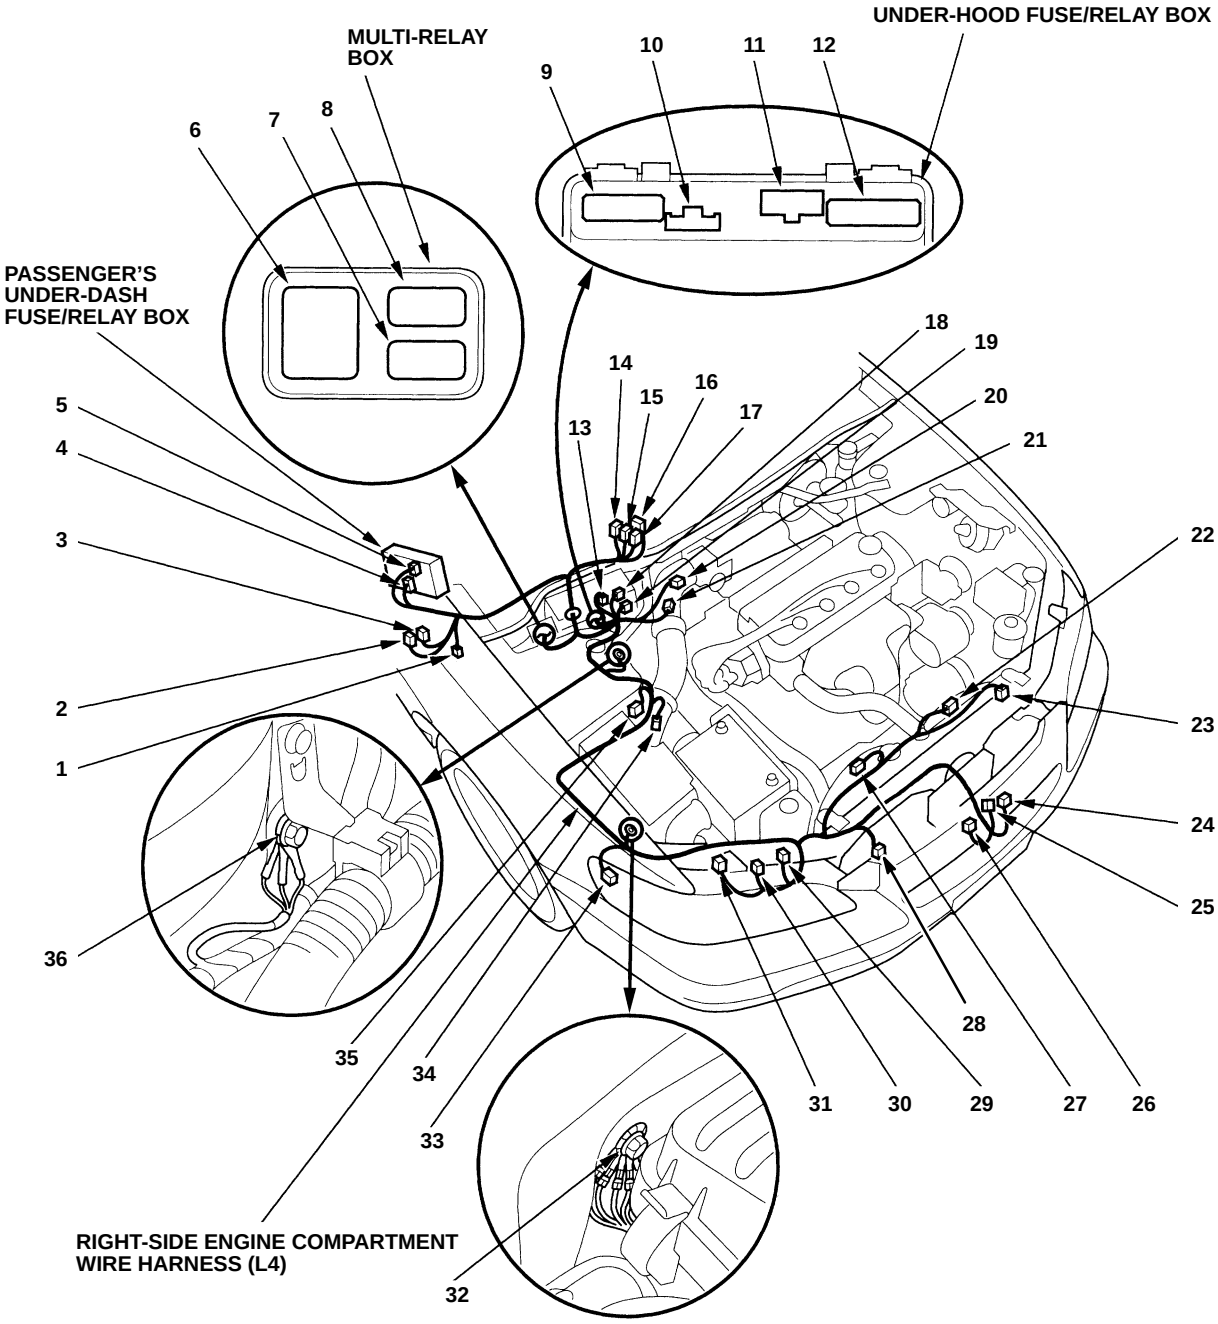

©2002 American Honda Motor Co., Inc.